

Lumen Output (based on 5700K)

| System Watts | Lumens | lm/W | Lumens | lm/W |
|--------------|--------|------|--------|------|
| 100 | 12,000 | 110 | 13,500 | 135 |
| 150 | 17,400 | 110 | 20,250 | 135 |
| 240 | 28,320 | 110 | 32,400 | 135 |

Accessories and Options

3-Step Microwave Motion Sensor and Photocell Combination




Phenix External Emergency Inverter (18470X-3)



Mounting Options Supported

Pictured with 100W driver.

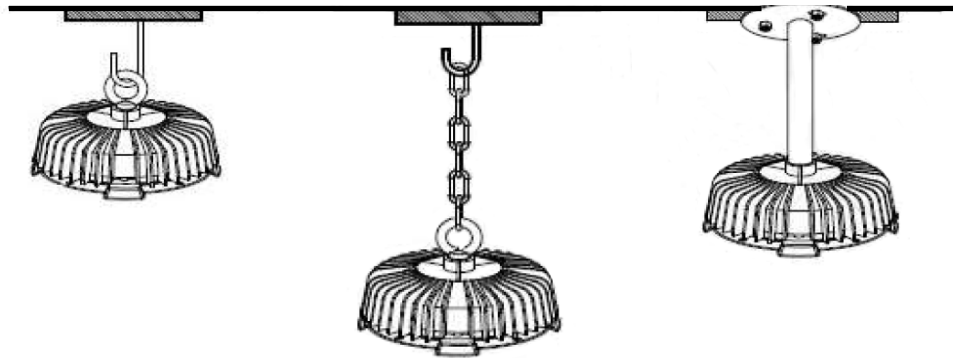


Hook Installation

Chain Installation


Pendant Installation

Fixture Dimensions and Weight




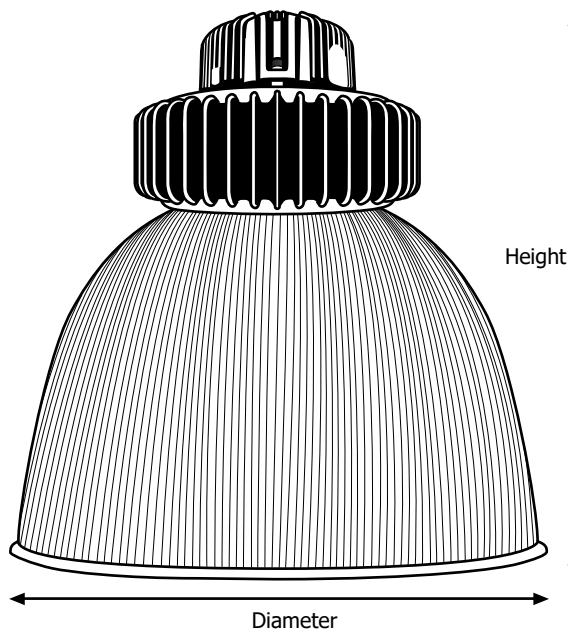


| Wattage | Diameter | Height | Weight |
|---------|----------|----------|----------|
| 100W | 16.2 in. | 16.5 in. | 6.4 lb. |
| | 411 mm. | 413 mm. | 2.6 kg. |
| 150W | 16.2 in. | 17.7 in. | 9.5 lb. |
| | 411 mm. | 450 mm. | 4.3 kg. |
| 240W | 16.2 in. | 19.8 in. | 10.5 lb. |
| | 411 mm. | 503 mm. | 4.8 kg. |

 Note: The wattage of the driver affects the height.




Motion Sensor

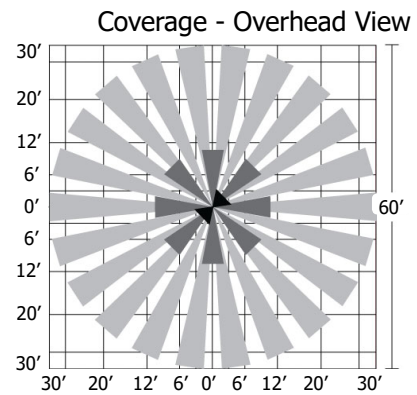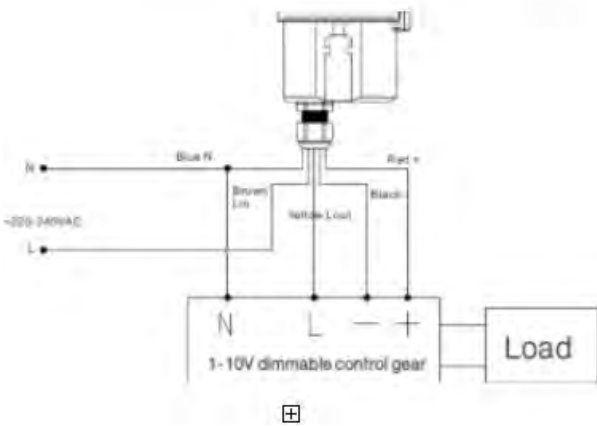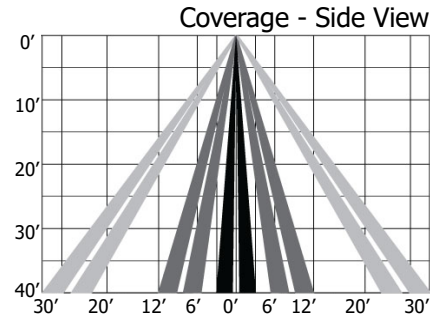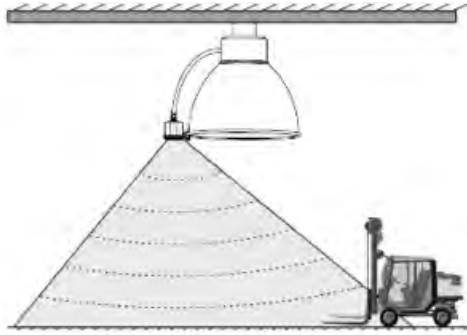


HIGH BAY RETAIL SERIES


Motion Detection

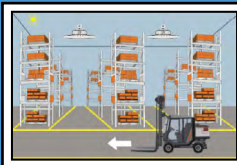


1. With sufficient ambient light, the sensor does not turn the fixture on.

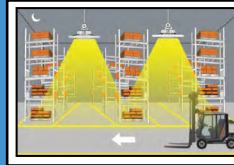

2. With insufficient ambient light, the sensor turns the fixture on when motion is detected.

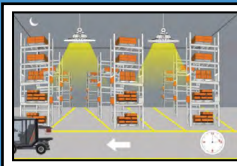


3. After hold time, the sensor dims the fixture to a low light level if no new motion is detected.

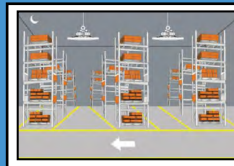

4. After stand-by-period, the sensor turns off the fixture if no motion is detected in its zone.

 This 3-Step Dimming/Daylight Sensor, with remote, provides a simple energy-saving solution to use light only when and where you need it. The motion sensor can be mounted at a maximum of 49 feet above the ground and still detect moving objects within as 2,500 square foot area. This sensor also has a daylight sensor for even more added lighting customization and energy savings.



Reflector Installation

1. While facing the LED side of the fixture, find the screws with the tabs.
2. Unscrew the screws with the tabs to remove them.
3. Discard the tabs.
4. Place the acrylic reflectors so the screw holes line up with the holes of the removed tabs.
5. Replace the screws over the reflector.
6. Ensure that the reflector is secure.
7. Done.

Fixture Installation

1. Important: Shut the power down.
2. Hang the fixture.
3. Connect the power.

